

## 248 Hydraulic Motor

This hydraulic motor comes with the diversion valve (244) and mounting bracket, two hoses for valve to motor connection, 2 mounting angles with spacers (249), and the shaft extension (245) to connect the motor to the gear box. Also included is the "flag" for valve plus a T-handle push-pull cable with mounting hardware to open and close the valve. We do not supply the 2 hoses from the valve to the tractor.

- 1) Turn the seeder upside down for easier installation (pictures shown are right side up).
- 2) Attach the shaft extension and mounting brackets with spacer to the motor. Slide the extension shaft over the gearbox shaft and install the bolt provided through the hole. Motor should be positioned as shown in photo #1. If you have a 1000 kit installed the motor should be turned with the hose outlets toward the other side. The valve and cable holder should be mounted to the other side of the unit (Picture 2).
- 3) Loosely connect the mounting angles on the hydraulic motor to the gearbox angles on the seeder with the bolts provided.
- 4) Align the motor and gearbox and tighten all bolts securely.
- 5) Attach the T-handle cable holder to the seeder frame.
- 6) Install the push-pull cable as shown with hardware provided.





