


Parts & Installation Instructions

Model C-7.5, C-8, C-8.5, C-9 & CC-9 Moldboards

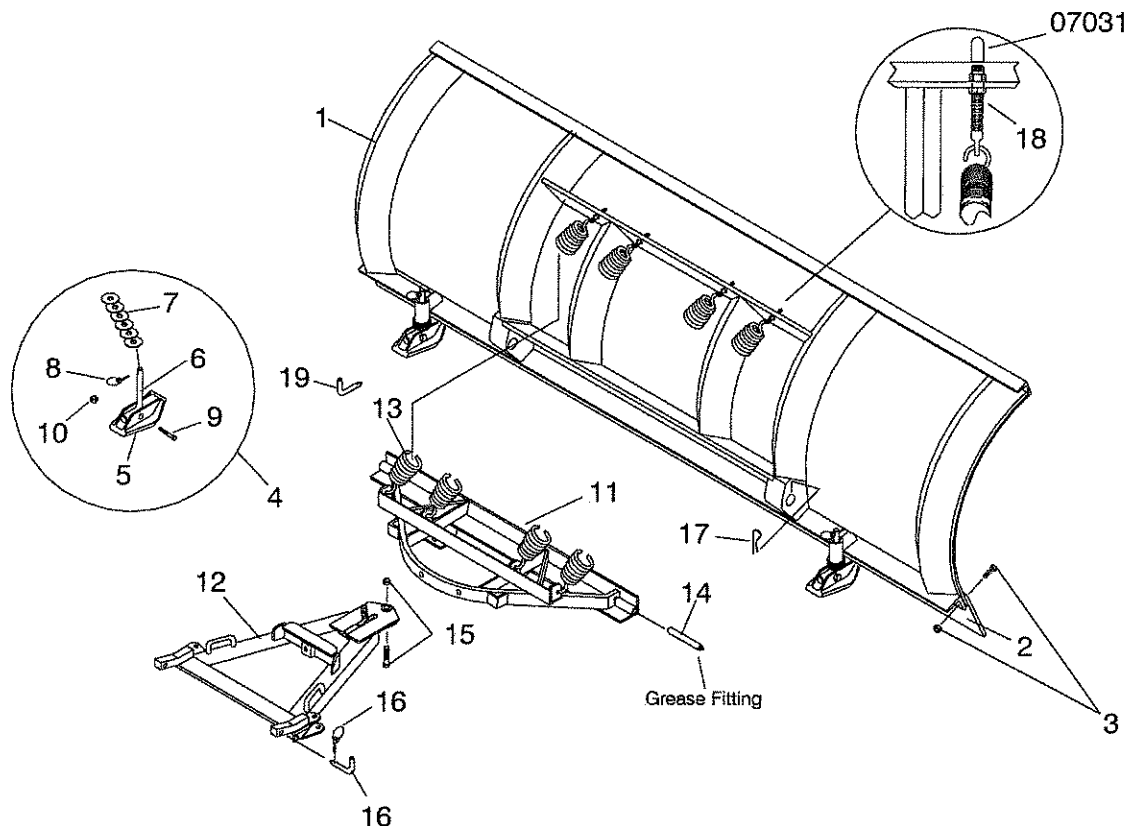

Parts List

Item	C - 7.5	C - 8.0	C - 8.5	C - 9.0	CC - 9.0	Qty.	Description
1	09240	09286	09983	09250	09298	1	Moldboard Assembly
2	09796	09133	09134	07259	07259	1	• Cutting Edge
3	08692	08692	08692	08318	08318	1	• Bolt C 1/2-13 x 2 & Locknut (Kit of 10 each)
4	09126	09126	09126	09126	09126	2	• Bolt C 5/8-11 x 2-1/4 & Locknut (Kit of 12 each)
5	07006	07006	07006	07006	07006	1	• Runner & Spindle Assembly
6	12057	12057	12057	12057	12057	1	• • Runner
7	20363	20363	20363	20363	20363	10	• • Spindle
8	22083	22083	22083	22083	22083	1	• • Flatwasher 1-1/4
9	20102	20102	20102	20102	20102	1	• • Linch Pin
10	20307	20307	20307	20307	20307	1	• • Bolt H 1/2-13 x 3
							• • Locknut 1/2-13
11	12793	12793	12793	12793	12793	1	Sector & A-Frame Carton
12						1	• Sector
13	07017	07017	07017	07017	07017	4	• A-Frame
	09916	09916	09916	09916	09916	1	• Trip Spring
	08341	08341	08341	08341	08341	1	• Marker Kit
14	09119	09119	09119	09119	09119	2	• Plow Hardware Bag
15	09125	09125	09125	09125	09125	1	• • Pivot Pin w/ Fittg. & Hair Pin
16	11101	11101	11101	11101	11101	2	• • King Bolt w/ Locknut
17	21984	21984	21984	21984	21984	2	• • Linch Pin
18	09124	09124	09124	09124	09124	4	• • Hair Pin Cotter
	07031	07031	07031	07031	07031	4	• • Eye Bolt w/ Locknut
19	13004	13004	13004	13004	13004	1	• • Cap, Eyebolt 1" Lg.
							• • Sector Pin

Parts indented are included in the assembly under which they are indented.

INSTALLATION INSTRUCTIONS

Note: The following instructions cover assembly of Moldboard, Sector and A-Frame. Refer to separate instructions for installation of plow mounting and hydraulic system.

- A. Liberally coat Pivot Pins (14) with chassis lubricant.
- B. Attach Sector (11) to Moldboard (1) with Pivot Pins (14) and insert Hair Pin Cotter. Grease Pivot Pin using grease fitting.
- C. Attach Eye Bolts (18) to Moldboard (1) and trip Springs (13) to Sector (11), making certain locknuts (18) are positioned as shown in Figure 1.
- D. Make certain each Eye Bolt (18) is in a vertical position as shown in figure 1 so that the Eye Bolt (18) and Trip Spring (13) hinge properly when moldboard trips.

Note: Proper tension is attained when Trip Spring (13) coils just begin to separate and then tightening top locknut four additional turns.

- E. Attach A-Frame (12) to Sector (11) as shown in Figure 2.

IMPORTANT: Install King Bolt (15) from bottom so that locknut (15) is on top.

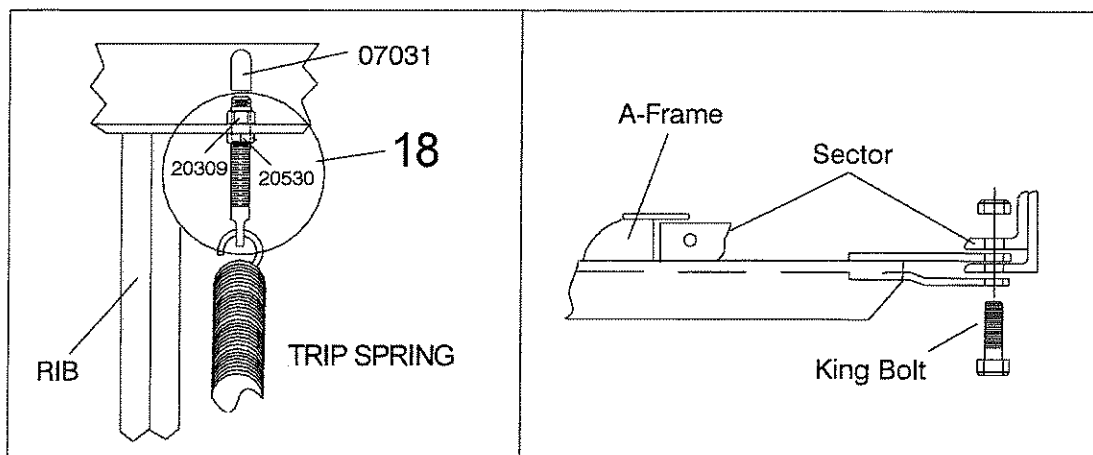


FIGURE 1

FIGURE 2